

GPL Models 159, 160, 490, 493 & 638 "RAM CLEAR" Procedure

- 1.) Pull out the white Interlock switch to access this mode.**
- 2.) Press and Hold the "#" to return to the "READY" mode (Do this only if there is a Diagnostic present on the display).**
- 3.) Press the "#" (Pound) key once, the display shows "VER XX.XX".**
- 4.) Press and Hold the "*" (Asterisk) key on the Selection keypad.**
- 5.) Press the "*" (Asterisk) key repeatedly until the display shows "CLEAR ALL".**
- 6.) Press and Hold the "C" key on the Selection keypad. The display shows "Clearing" then "Finished".**
- 7.) Continue pressing the "*" (Asterisk) key and Re-Configure the merchandiser or Press the "#" key to return to the beginning of the program mode and Set-Up the merchandiser using the Main Set Up Guide.**